


AiPi-Eyes-R1&R2: 4-inch RGB screen driver board test firmware usage guide

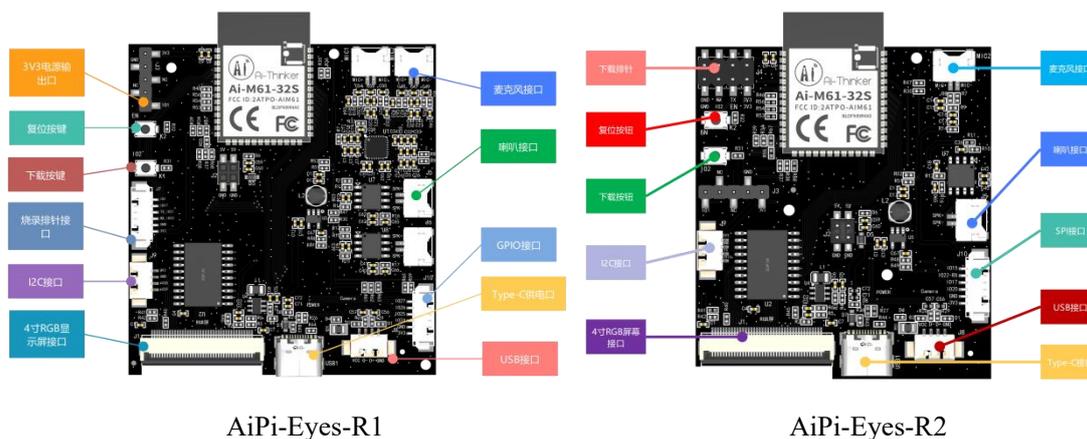

1. Firmware burning

1.1 Serial port wiring

TTL tool	AiPi
3.3V	3.3V
TXD	RX
RXD	TX
GND	GND


1.2 Burning

Burning tool download: [Click to download](#)

Firmware address:

After the burning tool starts burning, **First press and hold the "Download Button", then press the "Reset Button"** and then release it to enter the burning mode.

Open BLDevCube.exe, choose BL616/618, click Finish

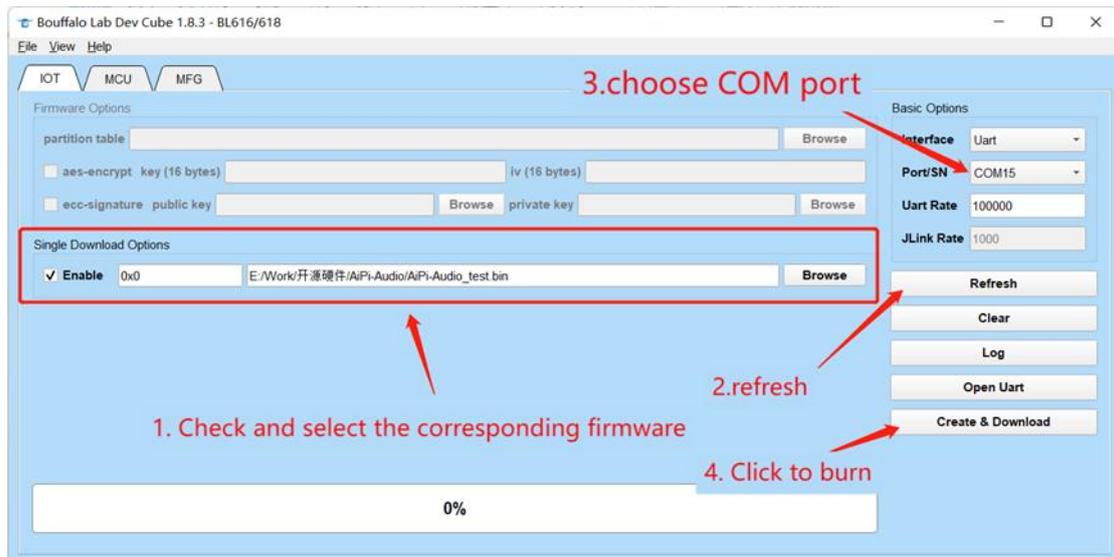

Note: After the firmware burning is completed, you need to press the reset button once before the program can run.

2. Steps for usage

AiPi-Eyes-R1&R2 is equipped with a 4-inch RGB screen, R1 is equipped with two speakers and microphones, and R2 is equipped with one speaker and microphone. After successfully burning the factory firmware, the following interface will appear. The light control can be clicked to turn the light on and off. The volume input from the microphone will be output from the speaker.

